


MODEL RS-776S

SCHEMATIC DIAGRAM

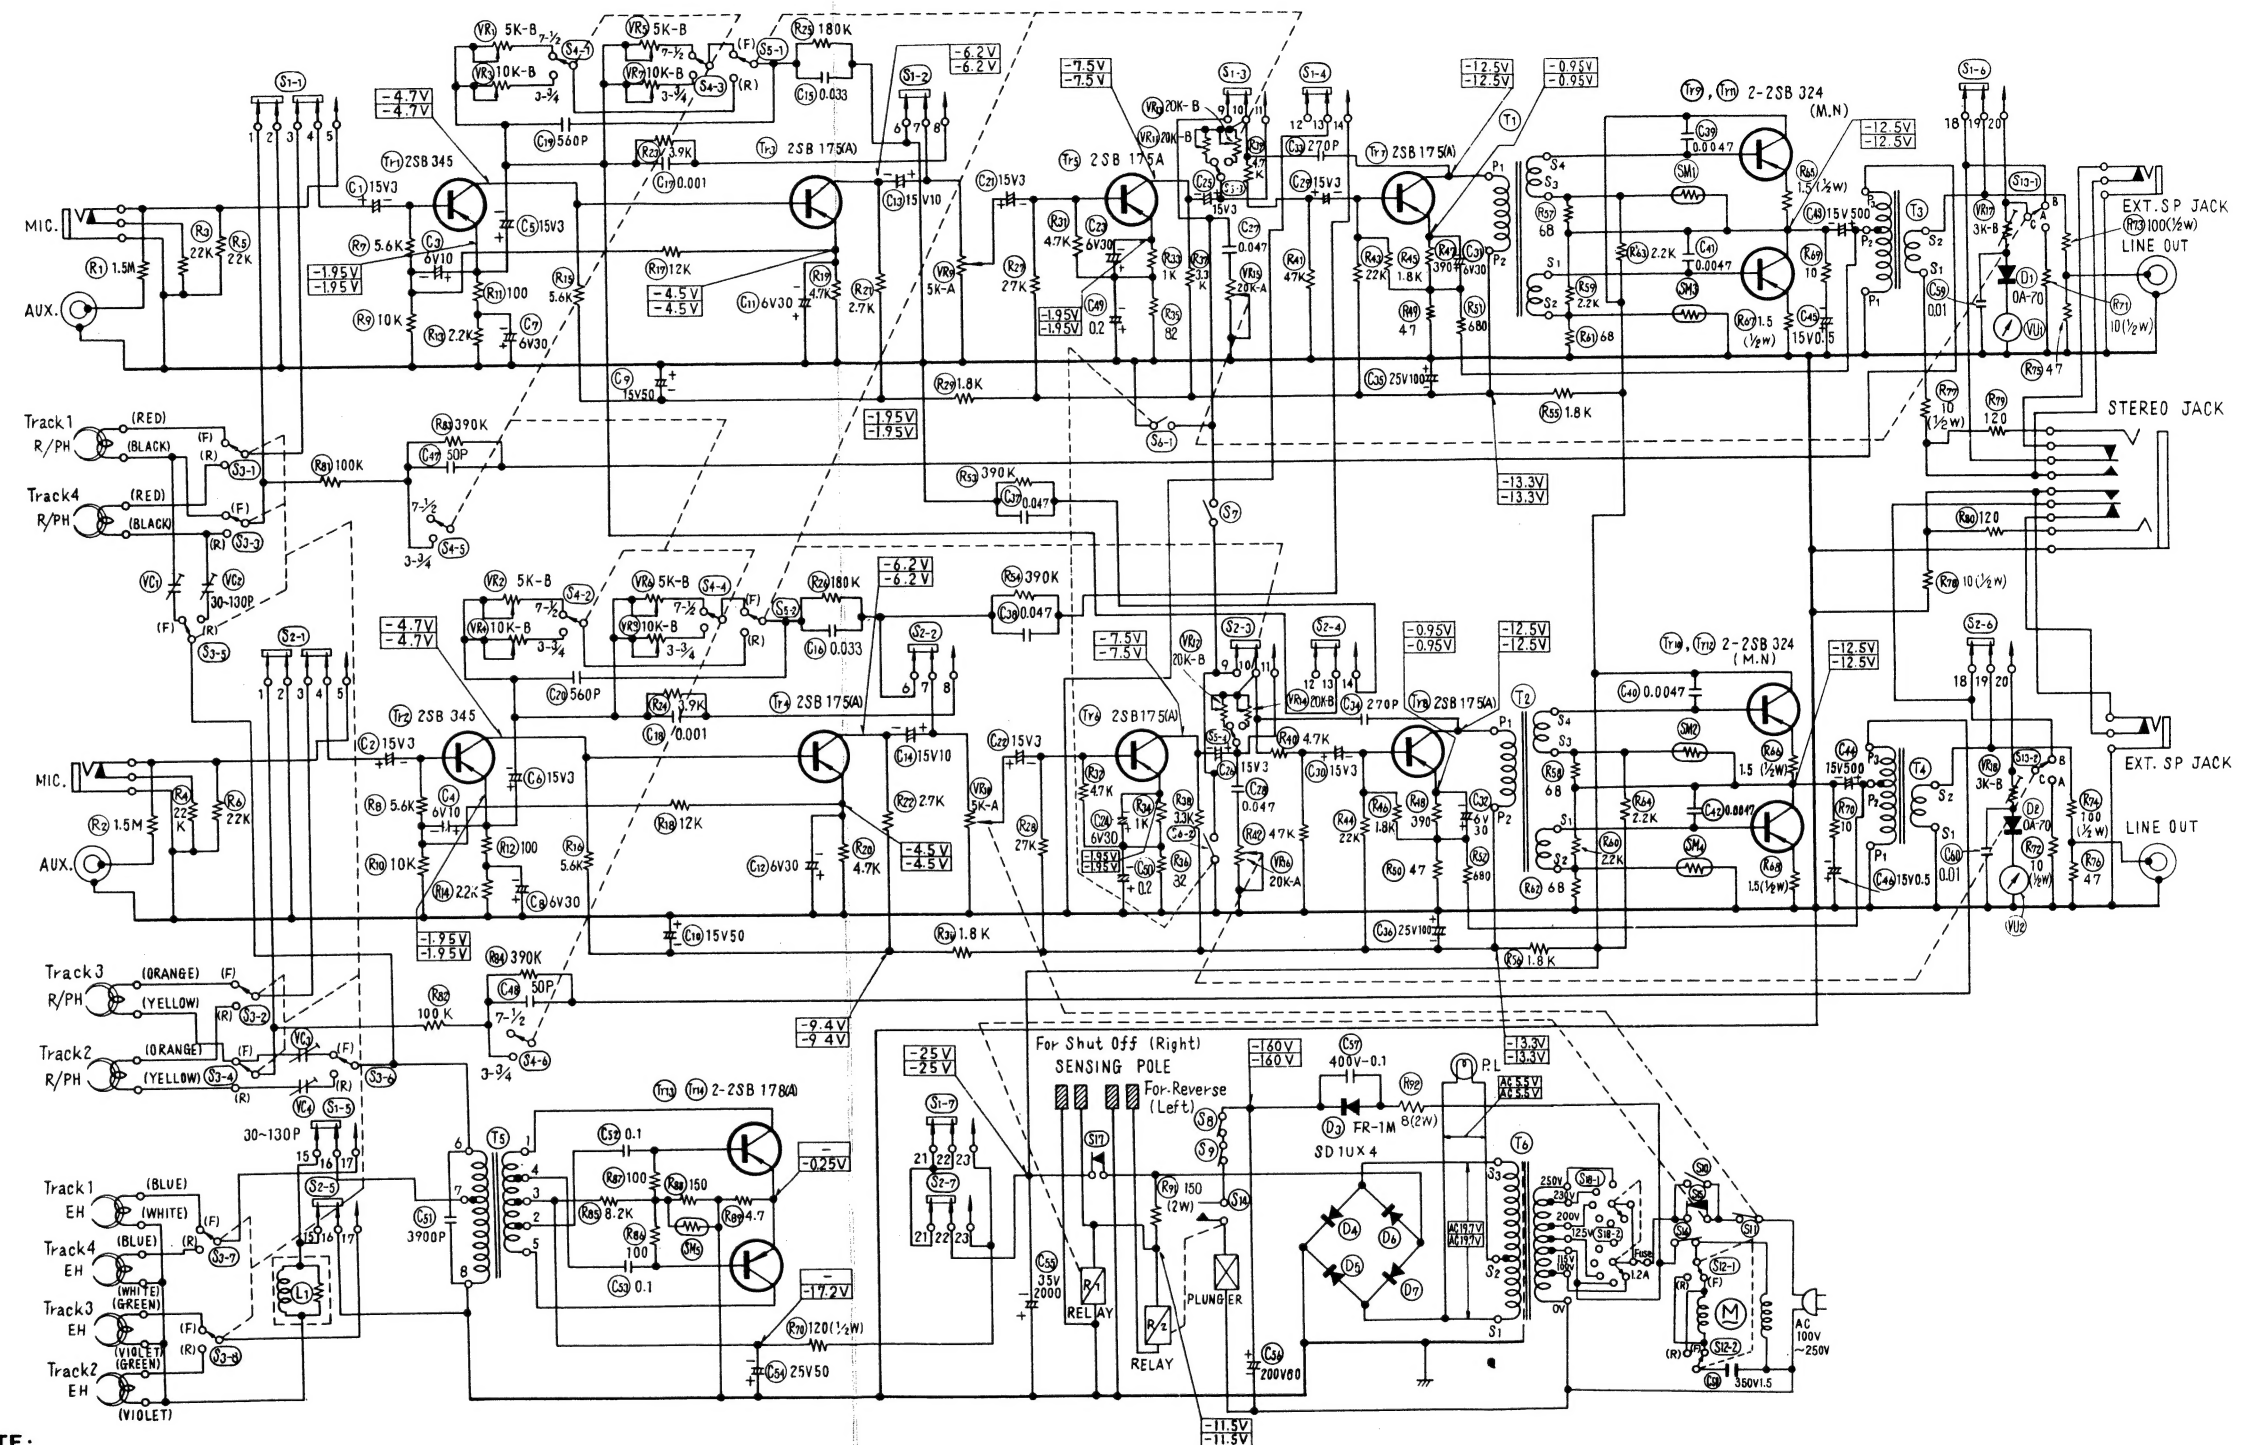

NOTE:

- | | | | | | |
|-----------------------------|--|-----------------------|---|--|--|
| 1. S1-1~S1-7, S2-1~S2-7 ... | Record Playback Selector Switch
(Shown in Stereo Playback Position) | 8. S10 | Relay Switch (Stop, Rewind, FF.....ON) | 14. S16 | Motor ON OFF Switch (Controlled with Pinch Roller action). |
| 2. S3-1~S3-8 | Head Change Switch. | 9. S11 | Power ON OFF Switch (Coupled with VR10). | 15. S17 | Discharge Protection Switch. |
| 3. S4-1~S4-6 | Speed Selector Switch. | 10. S12-1~S12-2 | Motor Rotation Selector Switch. | 16. S18-1~S18-2 | Voltage Selector Switch. |
| 4. S5-1~S5-4 | F R Gain Change Switch. | 11. S13-1~S13-2 | Monitor Switch (Coupled with VR15, VR16). | 17. Values indicated in <input type="text"/> are DC to chassis ground with no signal applied. | |
| 5. S6-1~S6-2 | Stop Switch. | 12. S14 | Reverse Switch (Coupled with Relay-2). | 18. The upper values should be measured during playback and the lower values during recording. | |
| 6. S7 | Stereo Monaural Selector Mixing Switch. | 13. S15 | Shut Off Switch (Coupled with Relay-1). | 19. All Resistance in Ω , K 1,000 Ω , M 1,000,000 Ω . | |
| 7. S8~S9 | Plunger Switch.
(S8.....Stop, Rewind, FF.....OFF).
(S9.....Reverse.....OFF). | | | 20. All Capacitance in Micro Farads, P Micro-microfarads. | |

WIRING CONNECTION DIAGRAM RS-776S

CONDUCTOR SIDE

